



Polaris Power Adapter General/Ranger/RZR

Thank you for purchasing XTC Motorsports RZR Power Adapter for Rear Light Bar, Third Brake Light, Whip Light and License Plate Light. Please read the instructions fully and familiarize yourself with the components before starting the install.

1. Unplug OEM rear light harness located on driver's side rear corner near the belt cover.



2. Plug the adapter into both OEM connectors as shown above.

WARNING! Keep power wire away from any hot or moving parts.

WARNING! Do not exceed the overall power out of the OEM Brake Light or Tail Light system, it is only for low wattage LED lights.

3. Run the adapter wire to the LED Rear Light, Third Brake Light, License Plate Light or Whip Light.
4. Strip 1/4" off each wire.
5. Using the Heat Shrinkable butt connectors, crimp them onto the wires.
6. Crimp the device wire the onto other end of butt connectors from harness, Red is Running-Tail Light, Green is Brake Light, Yellow is Brake Light and Brown, or Black is Ground.

Note: If using our Turn Signal Systems, plugging it in before the ATS/TSS will give brake light on both Green and Yellow wires, if after depending on the car the Right and Left Turn Signal can be either wire.

On the RZR the Right is Green, and the Left is Yellow. On the Ranger or General the Green is Left, and the Yellow is Right.

7. Heat Butt Connectors to seal the wires into the connectors to keep connection dry and clean.
8. Using the supplied cable tie's, secure the wire harness to the car once again making sure that the wire is kept away from any hot or moving parts.

We can also be reached at Support@xtcpowerproducts.com. Please visit our website at www.xtcpowerproducts.com

XTC Power Products
A Division of XTC Motorsports LLC
380 E Comstock Dr
Chandler, AZ 85225
480-558-8588

www.xtcpowerproducts.com

Copyright © 2023 XTC Motorsports LLC, All Rights Reserved