




Honda Plug & Play Horn Kit

Thank you for purchasing XTC Power Products Honda Pioneer Plug & Play Horn Kit.


Please read the instructions fully and familiarize yourself with the components before starting the install. When installing make sure that wires are run away from any hot or moving parts and properly secured.

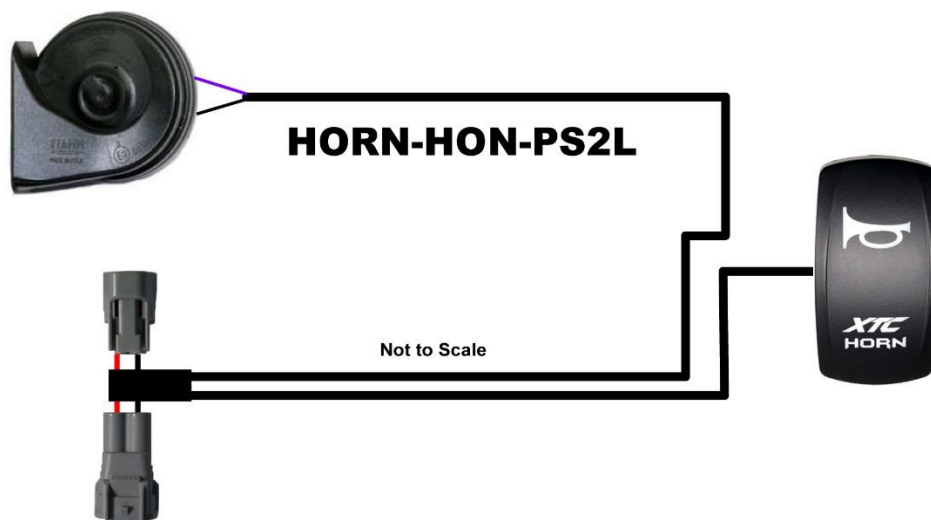

1. Remove the hood.
2. Remove the connector from the back of the AUX power outlet (old style Cigarette lighter outlet).
3. Plug removed connector into the horn harness, then plug the harness into the outlet.
4. Install Horn Switch – Remove one of the switch blanks. Remove the switch from the harness, push the switch Connector and wires through the rectangle and attach to switch and install in dash.



5. Mount the Horn, it can be mounted in multiple places, we used the side of the radiator mount, remove the bottom bolt and mount the horn using that bolt. Run the horn power wires violet and black and plug in. Polarity does not matter.

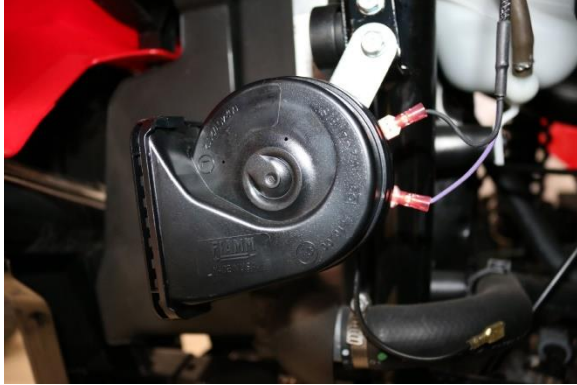

6. Verify Operation and reinstall Hood.

We can also be reached by email at Support@xtpowerproducts.com.
Please visit our website at www.xtpowerproducts.com

XTC Power Products
A Division of XTC Motorsports LLC
380 E Comstock Dr
Chandler, AZ 85225
480-558-8588

R1

www.xtpowerproducts.com
Copyright © 2024 XTC Motorsports LLC, All Rights Reserved